

Airsoft Spring Loaded BB Grenade

Assembly Guide

You Need :

12x M3x25mm screw with 6mm Countersunk Head 


12x M3 Nylon Lock Nuts 

1x AEG 100x15mm Steel Spring 

STEP 1

- 4 Screws
- 4 Lock Nuts


1. Assemble the 3 Top Parts
2. Assemble the 3 Bottom Parts

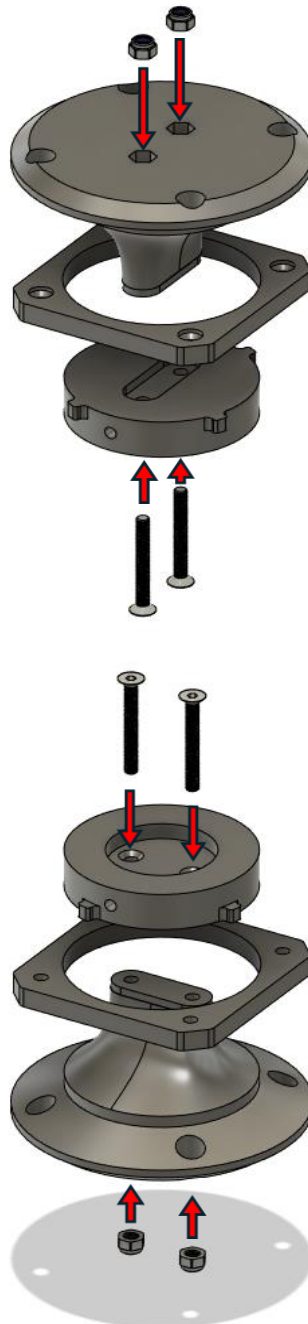

STEP 2

- 8 Lock Nuts


1. *Insert the 8 nuts in the corresponding hexagonal hole*

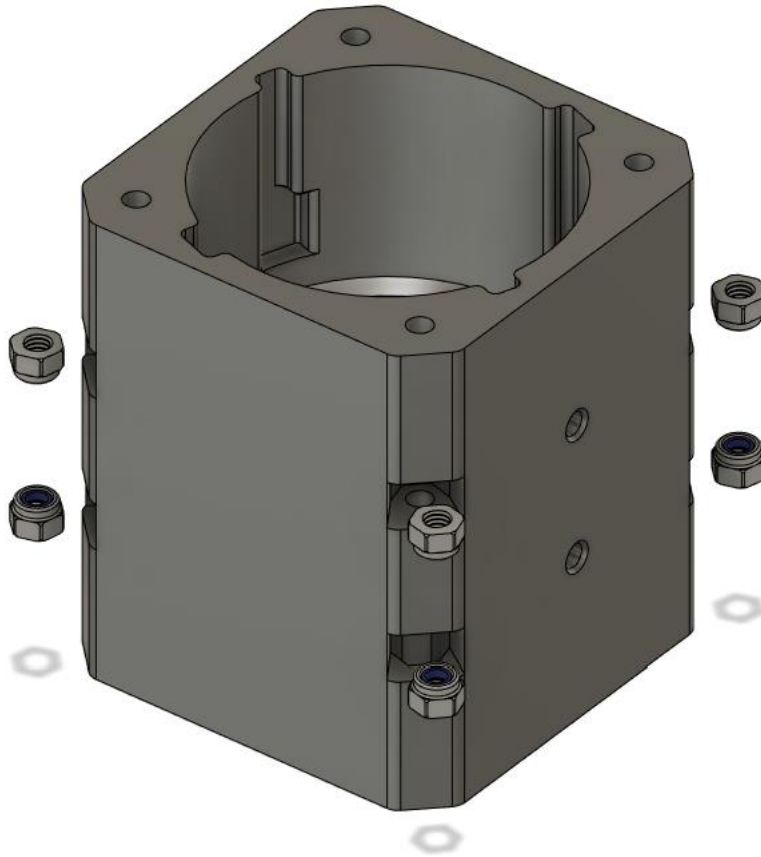

STEP 3


- 4 Screws

1. Screw the 4 screws through the Top Part into the lock nuts from STEP 2.
2. Once the Top Part is screwed, turn the disk 5° clockwise and make the Pin hole is aligned on the Base and the Top Part assembly (Green). If it is not, then swap the Top Part assembly with the Bottom Part assembly.

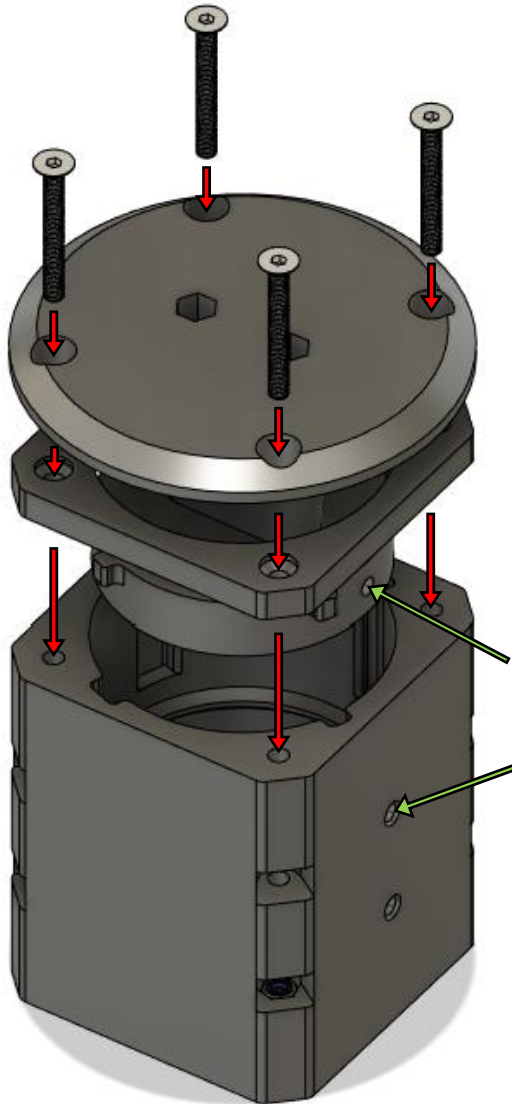

STEP 5

- 4 Screws
1. *Insert the spring into the base against the Top Part assembly*
 2. *Compress the spring with the help of the Bottom Part assembly*
 3. *Screw the 4 screws through the Bottom Part assembly into the lock nuts from STEP 2.*

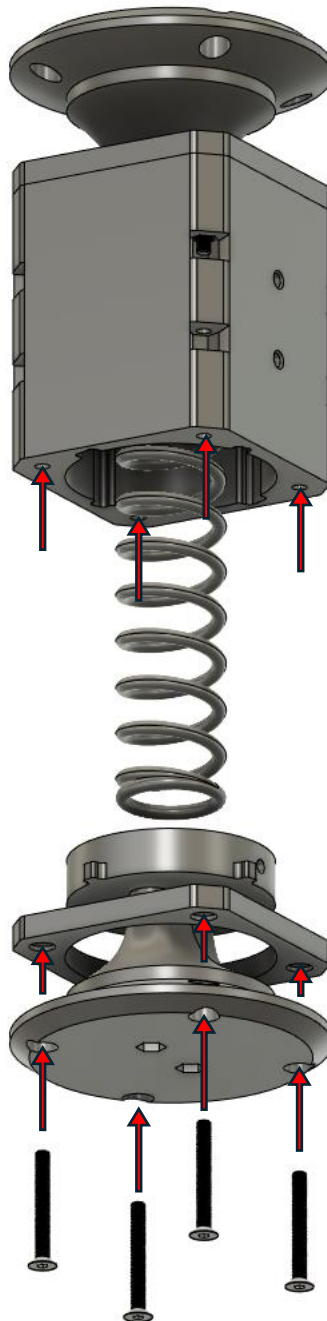

User/Loading Guide

STEP 1

- 25-30 BB

1. Load the Top Part assembly plate with 25 to 30 BB



STEP 2


1. Compress the Top Part against the base
2. Turn the Top Part 5° clockwise
3. Insert the Pin to block the Top Part in position



1



2

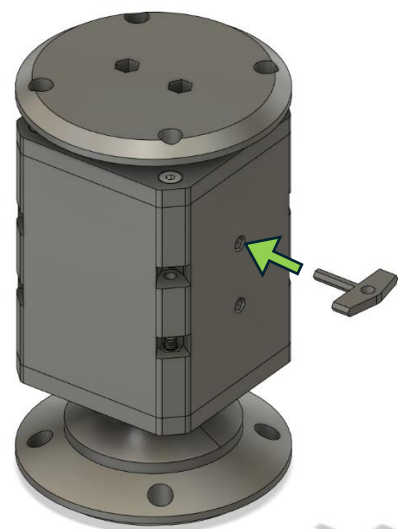

3

STEP 3

1. Repeat STEP 1 and STEP 2 on the other side



READY TO LAUNCH !!!